P66

WARRANTY CERTIFICATE

TP69 - LCD thermostat



Seller:	Date of Purchase:

WARRANTY CONDITIONS

- 1. The warranty period is 24 months from the date of purchase.
- 2. The product shall be installed and commissioned by a competent company or a person trained by the manufacturer.
- 3. When claiming warranty, this Warranty Certifi cate must be submitted together with the purchase receipt.
- The warranty is valid only when the technical conditions set by the Manufacturer, installation manual and instructions in the documentation and on the product itself are maintained.
- 5. The warranty does not cover defects caused by external conditions or improper operation conditions, defects caused by usual wear and tear, further when the product is not used in compliance with its purpose and when the defect was caused by mechanical damage, improper handling, tampering by a third person, improper installation, improper stocking, natural disaster etc.

COMMISSIONING

Company:
Date:
Rubber stamp print and signature of the installing person:



v1.1-01/2019

 $@2019 \ We \ reserve \ the \ right \ to \ errors, \ changes \ and \ improvements \ without \ prior \ notice.$

REGULUS spol. s r.o. E-mail: sales@regulus.eu Web: www.regulus.eu

TP69

Description:

Electronic thermostat with a digital thermometer. The temperature is set by keys. During adjusting, the temperature appears on the display with a hand symbol.


When setting is finished, the real room temperature is displayed and the hand symbol disappears. The thermostat is of electronic type, measuring the temperature every 2 minutes. When the setting is changed (call for heat or no call for heat), switching will occur within 2 minutes.

The thermometer symbol indicates the state of the thermostat. If the thermostat is closed (the boiler is firing), the thermometer symbol is blinking.

Recommended installation place:

The thermostat is designed for indoor use only. It should be placed on an inner wall about 150 cm above the floor, into a suitable space where changes in the room temperature can be registered thanks to freely circulating air.


Do not mount above heat sources (TV set, heater, fridge etc.), to places exposed to direct sunshine, draught, radiation from instruments, nor to a laundry.

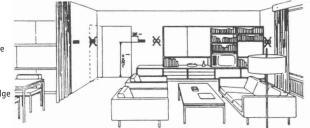


Mounting Instruction:

1. Removing the cover

- Loosen the screws (1) and (2) on the device bottom with a screwdriver
- Lift off the cover from the bottom (3) and shift upwards (4) to release the top latch

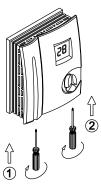

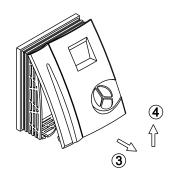

2. Mounting without a fixing board

- Make sure that the thermostat is placed horizontally.
- Place the thermostat so that the wires run through the opening not far from an electric box in the wall.
- Drill two holes into the wall, matching the two openings in the rear of the thermostat.
- Fix the thermostat onto the wall using two long screws and two sockets.

3. Mounting with a fixing board


- Put the fixing board onto the wall or electric box so that its position is horizontal and it fully covers the box.
- Thread the wires through its middle opening.
- Use 2 sockets for fixing.
- Attach the board with 2 long screws.
- Run the wires close to a terminal block.
- Attach the thermostat to the fixing board with 2 short screws.

4. Wiring


- Connect the appropriate wires to the terminal block.
- Finally, push all the wires back into the box.

5. Repositioning the cover

- Verify that the rubber keys are pressed against the PCB (5a).
- Place the cover on the top notches (6) and ensure the top locks are fastened.

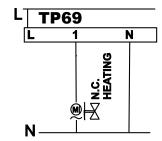

- Push the rubber keys into cover openings (5b).
- Click the cover to its place (7) and tighten the screws (8 and 9).
- Check the rubber keys for free movement. If they cannot be pressed easily, the cover repositioning procedure shall be repeated.

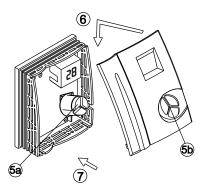



6. Temperature Control

- Press the key with the hand symbol (ເ♠). The temperature on the display starts blinking. Using the keys up ▲ or down ▼ adjust the desired temperature.
- Temperature can be set between 5 and 35°C, in 0.5°C steps.
- To confirm the value set, press the key with hand symbol ().

Warning:

In case of a power supply interruption the modified values will be lost and the factory values set as default 22 °C.

If no key is pressed within 10 seconds, the thermostat will save the last displayed value and return to current operation.

Technical Data:

Nominal contact load	230 V~ _, 16(3) A
Temperature probe	NTC termistor
Frequency of measuring	Approx. 2 min.
Operating temperature	0 - 40 °C
Storing temperature	0 - 50 °C
Relative humidity	5 - 90% (non-condensing)

IMPORTANT INFORMATION ON A PROPER DISPOSAL OF E-WASTE AS REQUIRED BY THE EC DIRECTIVE 2002/96/EC (WEEE)

Do not dispose of this product as unsorted municipal waste. Please dispose of this product by returning it to the point of sale or to your local municipal collection point for recycling. Respecting these rules will help to preserve, protect and improve the quality of the environment, protect human health and utilise natural resources prudently and rationally. The crossed out wheeled bin with marking bar, printed also on the product itself, identifies that the product must be disposed of at a recycling collection site.





WEEE Registration Number: 02771/07-ECZ